


AD00.00-P-2000-04A	Connect STAR DIAGNOSIS and read out fault memory		
--------------------	--	--	--

MODEL 117, 124.034/036, 129, 140, 156, 163, 164, 166, 168, 169, 170, 171.4, 172, 176, 197, 199, 202, 203, 204, 207, 208, 209, 210, 211, 212, 215, 216, 218, 219, 220, 221, 230, 231, 240, 242, 245, 246, 251, 414

MODEL 461, 463

Shown on model 210


0100 Star Diagnosis
X11/4 Data link connector

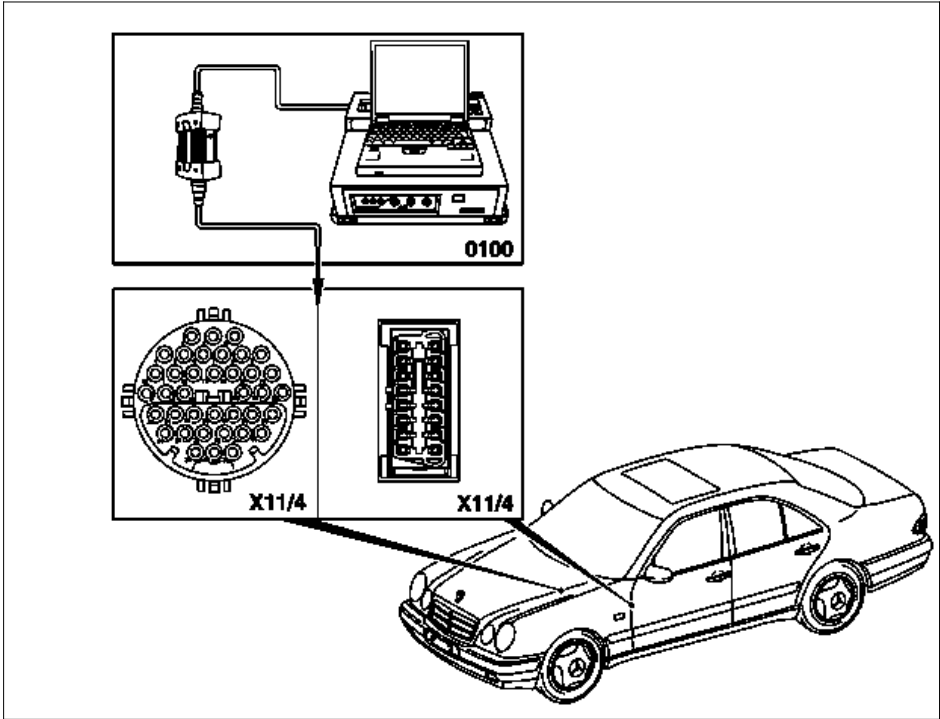

P00.30-2002-06

Shown on model 163


0100 Star Diagnosis
X11/4 Data link connector

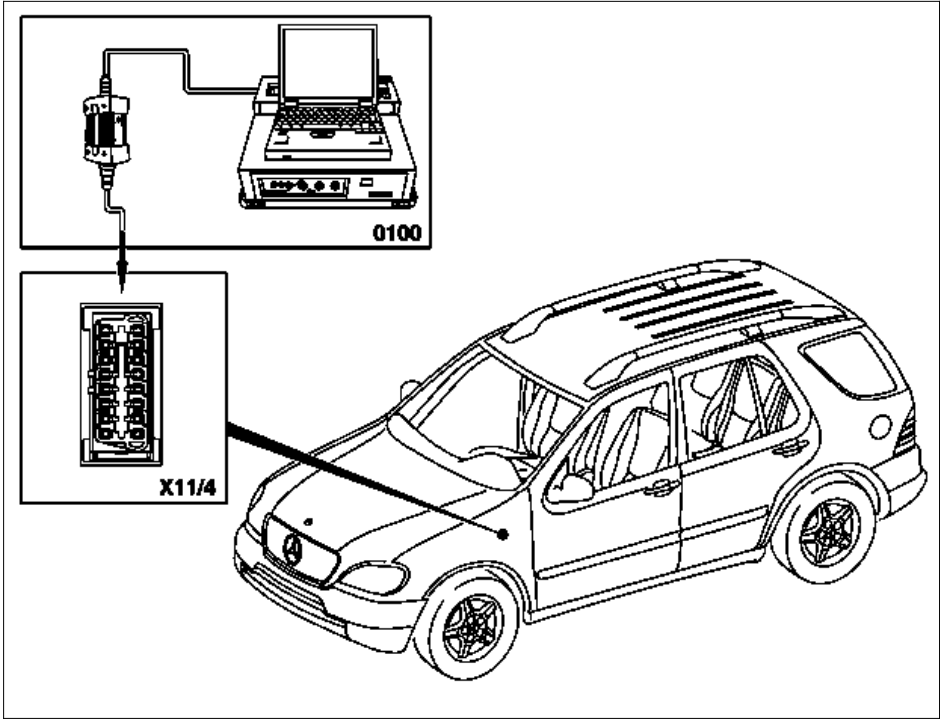

P00.30-2005-06

Shown on model 164.1


0100 Star Diagnosis
X11/4 Data link connector

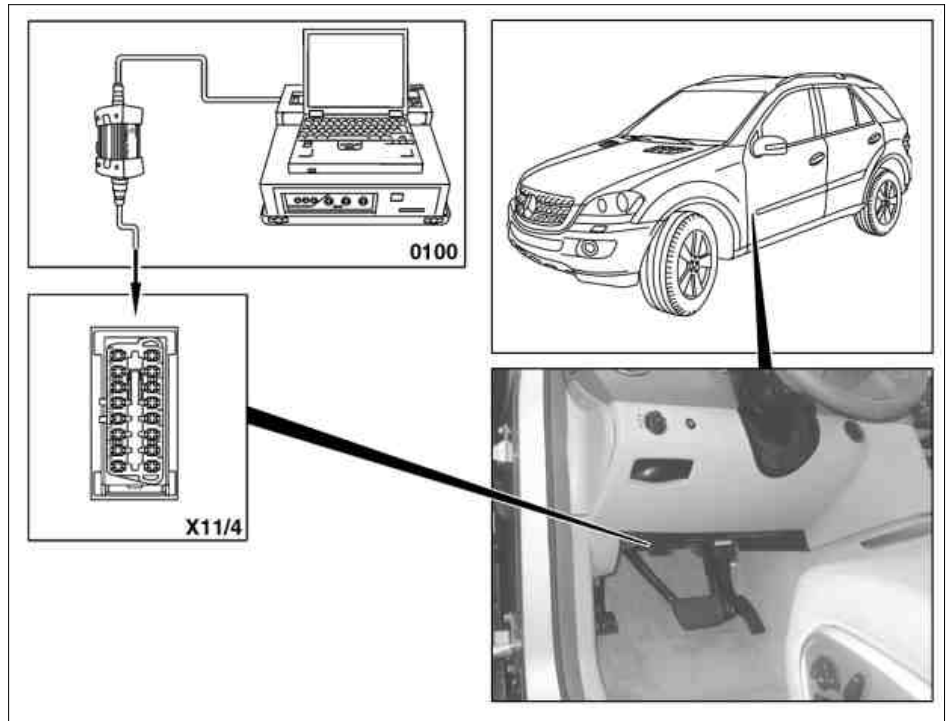

P00.30-2031-06

Shown on model 461.302


0100 Star Diagnosis
X11/4 Data link connector

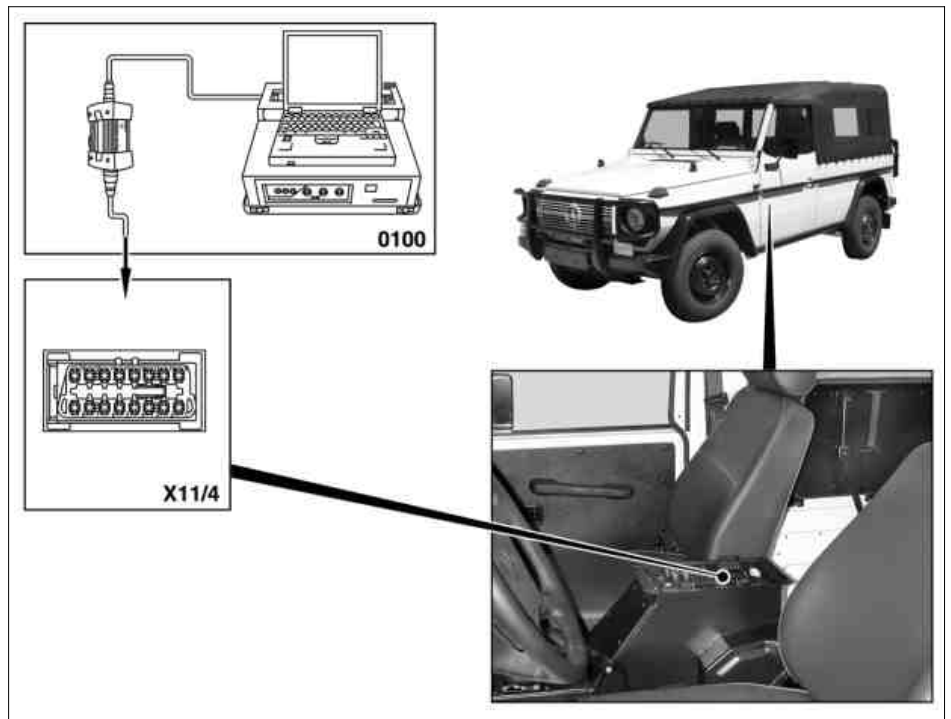

P00.00-3388-06

Shown on model 171.4

0100 Star Diagnosis
X11/22 Data link connector (1.3)

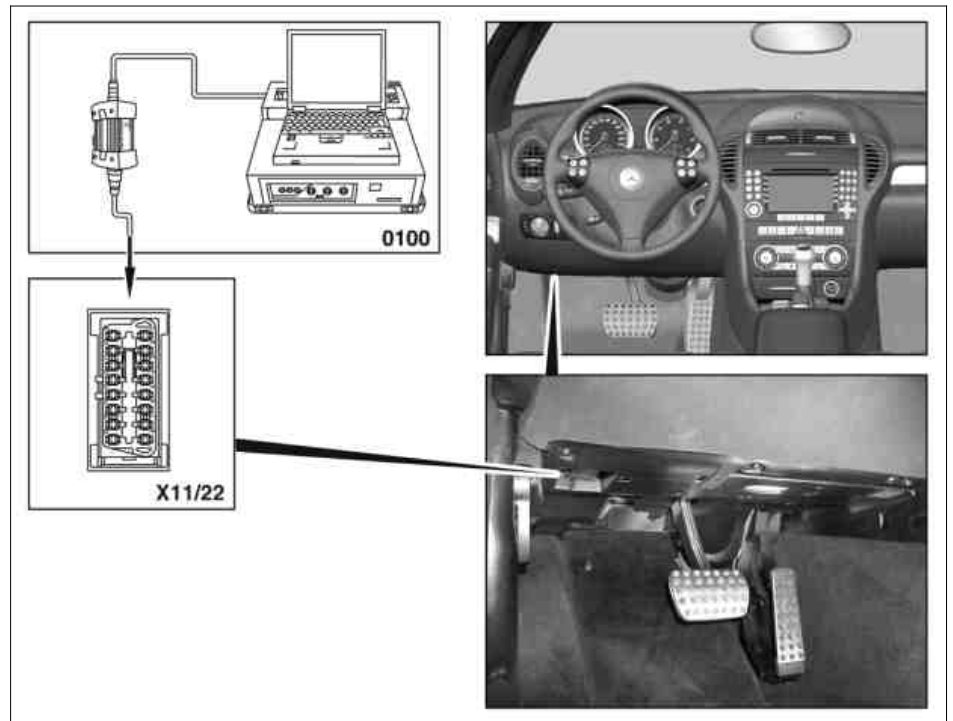

P00.30-2028-06

- 1 Connect Star Diagnosis (0100).

i The work procedures in the diagnosis program are menu-assisted.
- 2 Switch on ignition.
- 3 Start the Diagnosis Assistance System.
- 4 Select the model series in the menu.
- 5 Disconnect STAR DIAGNOSIS (0100).

i Stored faults which may be caused by disconnecting cables or by simulation during testing operations must be deleted in the diagnostic trouble code memory following completion of the operations.