


## MODEL 230.4 with CODE (P99) Special model "AMG Black Series"

- 1 Headliner
- 2 Edge guard
- 3 Trim at wind deflector
- 4 Bolts

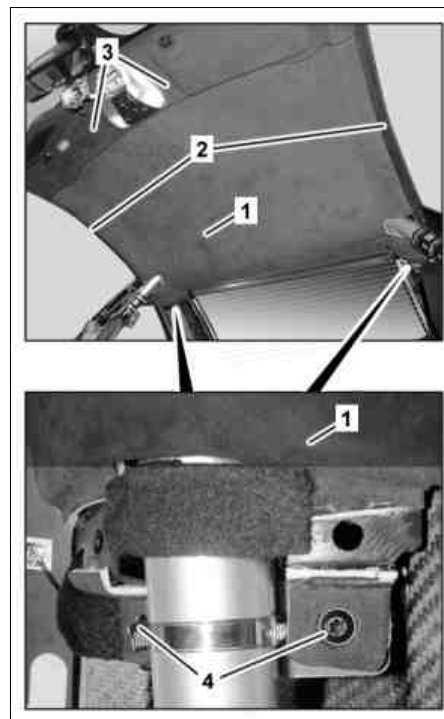

P68.30-3396-03

☒ ☒	Remove/install		
1	Remove left and right B-pillar paneling		AR68.30-P-4700RBS
2	Remove left and right C-pillar paneling		AR68.30-P-4490RBS
3	Remove edge guard (2) in area of headliner (1)		
4	Remove bolts (4)		
5	Slide headliner (1) toward rear until hooks are removed from the wind deflector paneling (3). Then remove headliner (1) from vehicle.	<p><b>i</b> Aid of helper required.</p> <p><b>i</b> <b>Installation:</b> Position headliner (1) below wind deflector paneling (3) when moving forward.</p>	
6	Install in the reverse order		