
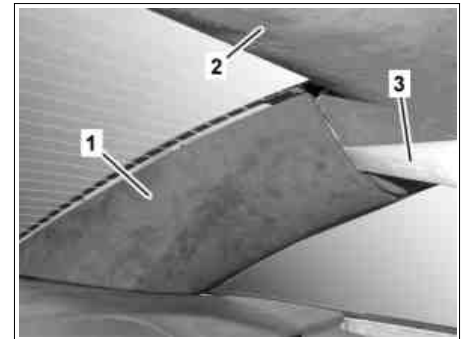





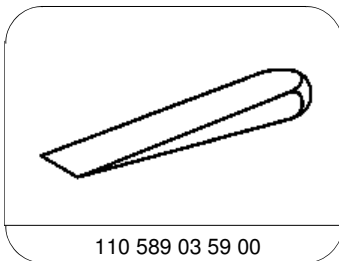
MODEL 230.4 with CODE (P99) Special model "AMG Black Series"

- 1 Trim
- 2 Headliner
- 3  Mounting wedge



P68.30-3397-01

	Remove/install		
1	Unclip paneling (1) from headliner (2) with assembly wedge (3)		*110589035900
2	Remove paneling (1) toward inside and upward out of rear shelf	 Installation: Replace damaged clips.	
3	Install in the reverse order		



110 589 03 59 00

Mounting wedge